

Voltage Stabiliser/Regulator





Smiths Classic bimetal gauges operate on a stabilised 10 volt supply. A healthy car battery will supply somewhere in the region of 13.5 volts. A voltage stabiliser must be fitted to the guage supply line. There are many variants of the SMiths voltage stabiliser but the connection should remain the same.

Connection 'I' - Depending on the variant, this connector may be a sinlge male or female or a dual male or female. The 'I' terminal is connected to the gauge.

Connection 'B' - This connection can vary in the same way as 'I'. The 'B' Terminal is connected to the battery supply via the ignition switch.

Mounting Bracket - Depending on the part number, the mounting bracket appear on the sides, top or bottom of the case. The case MUST be connected to ground, this is generally achieved by fixing the bracket to the chasis or other earth.